Evenflo LiteMax 35 Rear-Facing Only

(Infant Car Seat) 4 - 35 lbs. and 17 - 32" The top of the child's head must be at least 1-inch below the top of the child restraint seat back.

Evenflo FAQ: Weight and height requirements were updated to allow use with small infants. Infants from 3 - 35 lbs. and 15.75 - 32" can be secured in the car seat with approval of health care providers.

https://www.evenflo.com/pages/faq

 


Harness Release Button: To loosen the harness straps, press the harness release button while pulling upward and forward on the harness straps.

Harness Adjustment Strap: The harness adjustment strap is the webbing below the release button. Pull the end of harness adjustment strap to tighten the harness.

Harness Height Adjustment: Place harness at or below the child's **shoulders**. Connect the harness to the splitter plate. There are two positions on the harness straps. The top loop is for newborn use. The bottom loop is for use as your child grows.

Adjustable Crotch Strap: There are four crotch strap positions for your child's comfort including a special a position for newborns less than 8lbs. Insert the crotch strap anchor into the slot closest to the child, but NEVER under the child. Make sure the anchor is through the seat pad and the shell and laying flat against the bottom of the car seat. Pull up on the crotch strap to make sure it is securely fastened.



Level Indicator: Park on a level surface. Adjust the leveling foot on the base for the correct rear-facing angle for the child. On the car seat base, the white level indicator line must be in the correct color zone.

Handle Positions Do not use Position 2 (Convenience) or

Position 4 (Stand) in the vehicle. Follow car

seat instructions for acceptable handle

positions in the car.

♦ Blue: 4 - 20 lbs.

• Green: 20 - 35 lbs.

front-to-back at the belt path.

 Never allow the white indicator line to be in the red zone.



One Step Lock-Off: Push down on Lock-Off while pushing back on Lock-Off Release Tab. Lift the Lock-Off up to reveal the belt path. Route the seat belt through the belt path openings on the sides of the base. Buckle the seat belt and pull the shoulder belt to remove the slack. Close the Lock-Off until it clicks into place. The base should move less than 1 inch when pulled from side-to-side and



To change handle positions, squeeze both Handle

Position 3 U.S. travel position Position 4* Handle Stand position

*IMPORTANT: NEVER use Positions 2 or 4 when traveling in a vehicle. U.S. and Canadian models differ in acceptable handle positions for travel (see illustration above and page 37-38).



Location Warning:

When installing the car seat in a back seat, ensure that there is at least 1.5 inches of space between the child restraint and the vehicle seat that is closest to the child's head.











Placing the Carrier in the Base:

Secure the carrier to the base. Place the carrier into the base and press down to lock. Check to see if the carrier is firmly locked into the base by lifting up on the carrier handle. Squeeze the carrier release handle while lifting up the carrier.





Evenflo car seat installation videos.





Visit www.evenflo.com (Support) or scan for car seat instruction manual.

Go Time High-Back Booster Seat

With Backrest: 40—120 lbs. and 44—57"; Child is at least four years old. The tops of the child's ears are at or below the top of the child restraint headrest.

Without Backrest: 40—120 lbs. and 44—57"; Child is at least four years old. The top of the child's ears are below the top of the vehicle seat head restraint.

Belt Positioning Booster seat must always be used with a Lap and Shoulder Belt.

Booster Seat Assembly Required:

Follow manufacturer's instructions for step-by-step assembling of the booster seat.

be positioned under

the armrest on the

booster seat.

Using the Booster Seat with the Back Rest Booster Seat Height Adjustment

You will need to adjust the headrest as the child grows to maintain proper seat belt positioning.

To adjust the headrest pull and hold the adjustment handle then slide the headrest up or down.

Shoulder Belt Guide

The headrest is positioned properly when the shoulder belt guides are at or slightly above the top of the child's shoulders.

snug across the child's hips.


and fastened into the buckle.



Using the Booster Seat without the Back Rest

Removing Backrest

- **1.** Lay the Booster Seat on its front.
- 2. Pull lever on the bottom of the base and remove the backrest from the base.

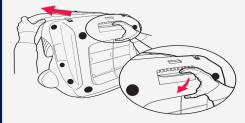




Make sure the child has a vehicle head restraint behind their head when using a backless booster seat.

Shoulder Belt Clip For Backless Booster




Thread the looped end of the shoulder belt clip through the anchor point on the bottom of the booster seat.

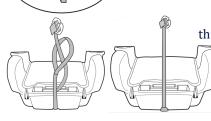

Thread the shoulder belt clip through the loop at the end of the belt and pull until tight.

 Place booster seat on vehicle seat and attach shoulder belt clip to vehicle seat belt. Adjust the strap to keep the shoulder belt centered on the child's shoulder and the belt clip at or slightly above the child's shoulder.



• Use the shoulder belt clip only when necessary to position the seat belt across the center of the chest and shoulder.

The lap and shoulder belts **MUST** be positioned under the armrest on the booster seat.

Lap Belt: Placed low and snug across the child's hips, and fastened into the buckle.



